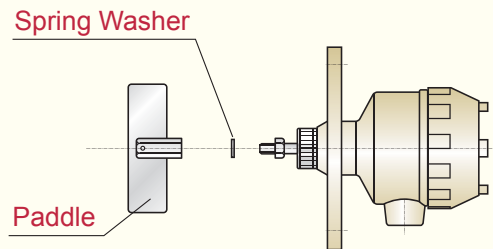
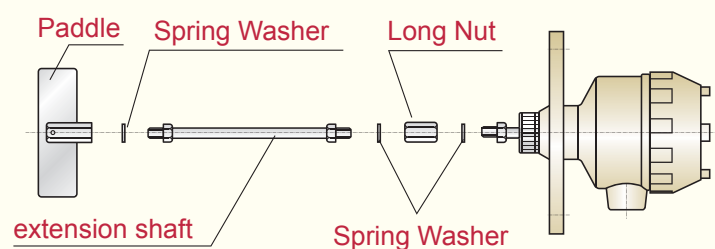
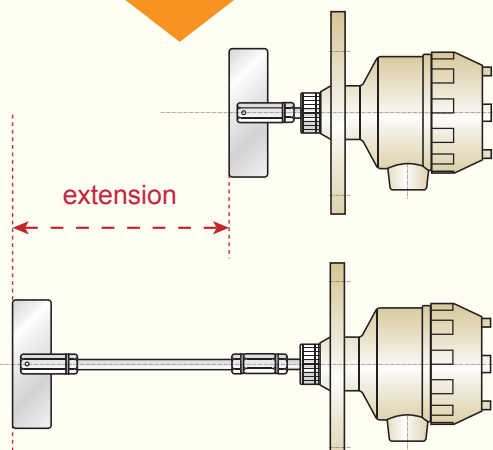
**■ Working contents**

<b>Extension Procedure</b>	<b>1. First of all, remove paddle and S washer from shaft with spanner</b>
	
<b>Assemble completed</b>	<b>2. Secondly, replace them following a drawing below</b>
	  <p>Please do not apply the extension shaft for middle or low detection which will give a huge load to break the shaft</p> 