


# Vertical float switch

## Introduction of vertical float type joint type.

### Application Example


In that case ...  
Please use our joint type!

- 1 It cannot be installed because there is no space between the tank top and the ceiling of the building.

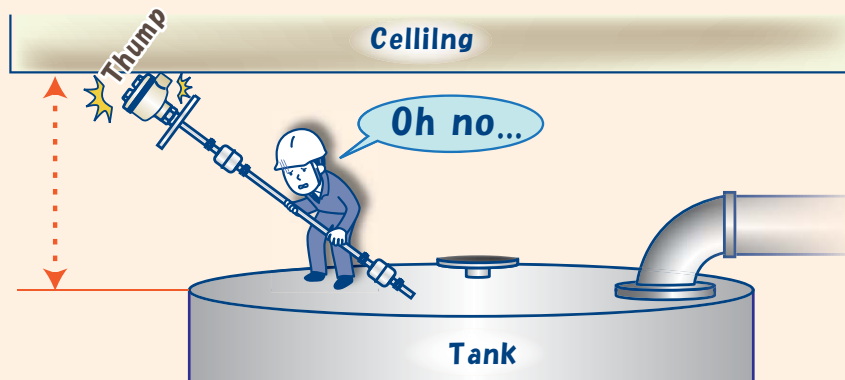

If the total length is long, the product will hit the ceiling when installing the float switch and cannot be installed.


- 2 When requesting a product with a total length exceeding 4m.

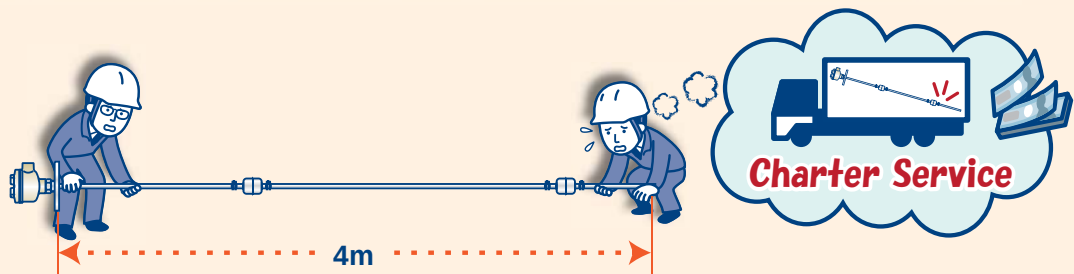

The standard length of the material is up to 4m, so it cannot be manufactured as a single piece. It will be manufactured by connecting with a joint.

In addition, if it is too long, it will need to be delivered by charter service and the transport cost will be very high. By making it a disassemble type, it can be shipped in a package that can be loaded by a courier service saving transportation costs.

### About joint type

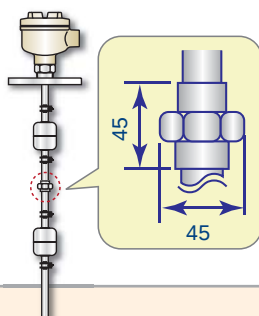

- It can be produced by SUS, PVC, HTPVC materials.
- Since the joint part contains an O-ring, there is no need to worry about liquid invasion.
- It can be disassembled to any size and assembled at the facility.